




NÁVOD K MONTÁŽI

Vitrína 1 dveře MADRID

266251



1 h 30 min

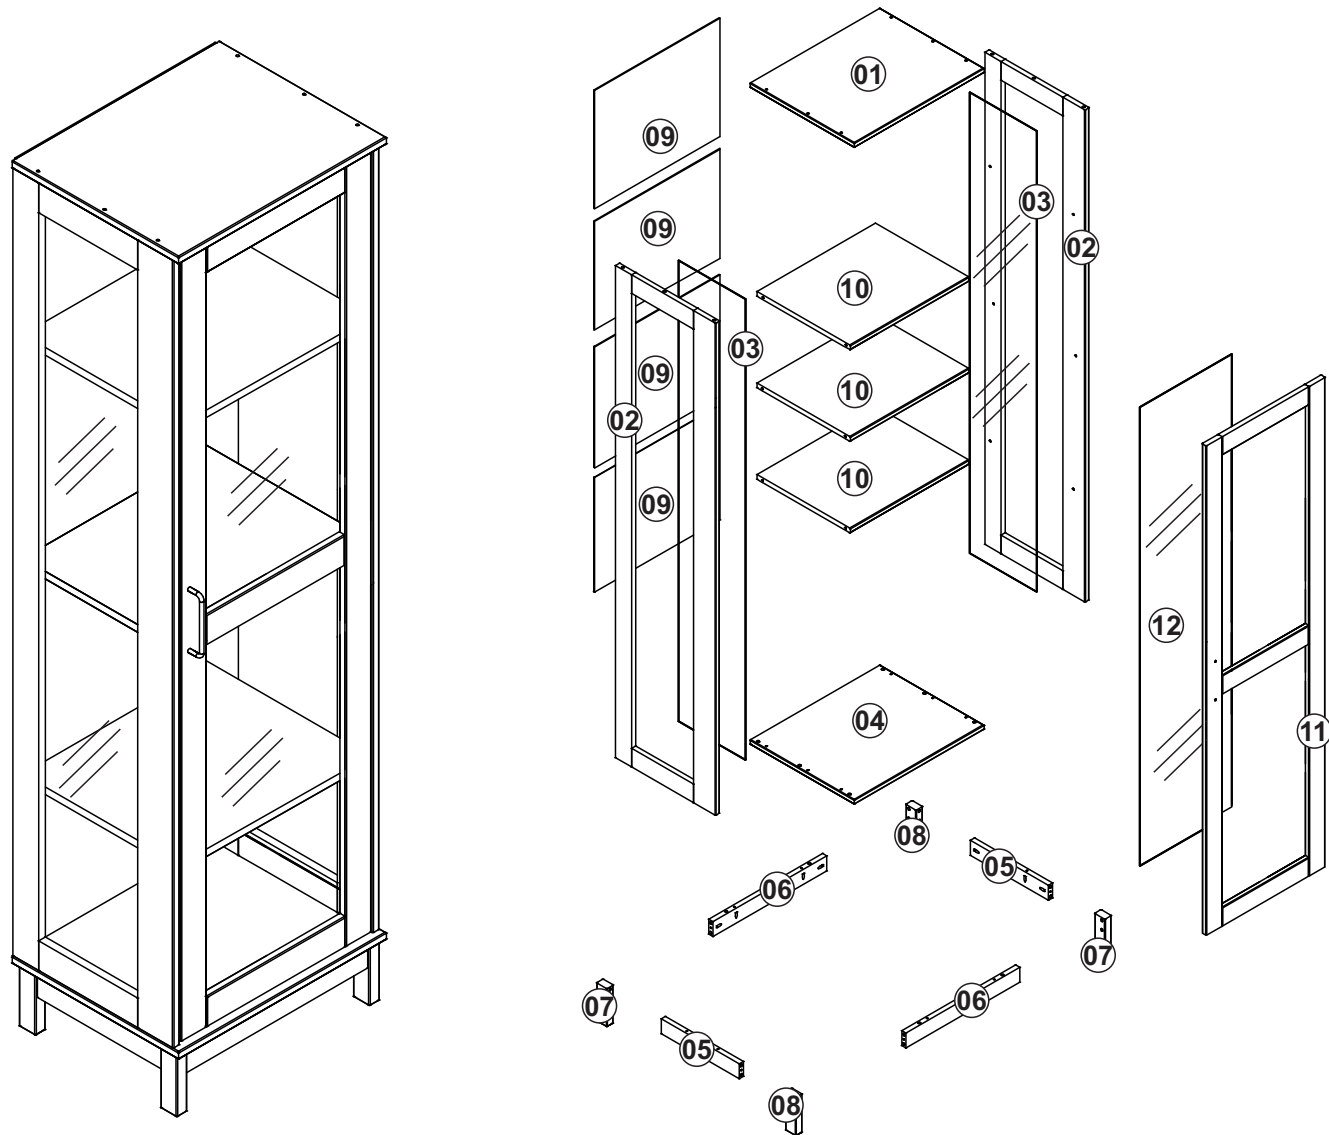


SEZNAM DÍLŮ

KS


01 - HORNÍ DESKA	1
02 - BOČNICE	2
03 - SKLO BOČNICE	2
04 - DNO	1
05 - KRATŠÍ PŘÍČKA	2
06 - DELŠÍ PŘÍČKA	2
07 - PRAVÁ NOHA	2
08 - LEVÁ NOHA	2
09 - ZÁDA	4
10 - POLICE	3
11 - DVEŘE	1
12 - SKLO DVEŘÍ	1

A		8.0 x 30	x44
B		4.0 x 40	x12
C		3.5 x 30	x17
D		M4 x 22	x02
E		3.5 x 14	x24
F			x09
G		10 x 10	x43
H			x12
J			x04
K			x04
L			x18
M			x04
N			x01
O		3.0 x 16	x42
P			x04
R		15 cm	x01
S		8mm	x01
T		3/16	x02
U		4.5 x 50	x01
V		Zarážka	x02
W		3.5 x 20	x02

01

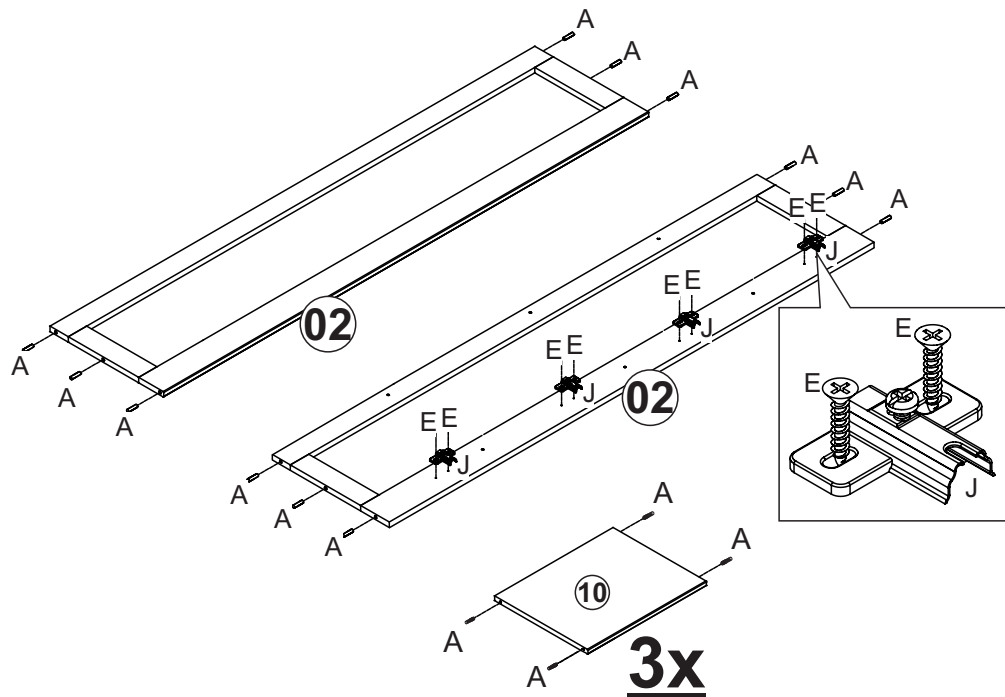


02

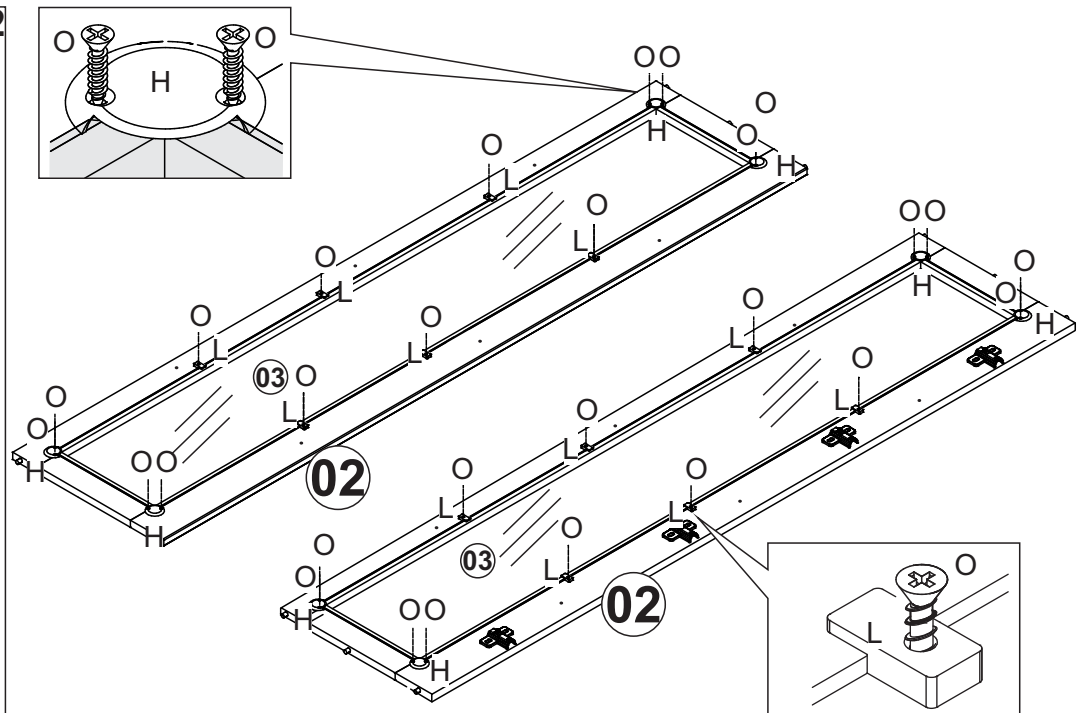


03

2x

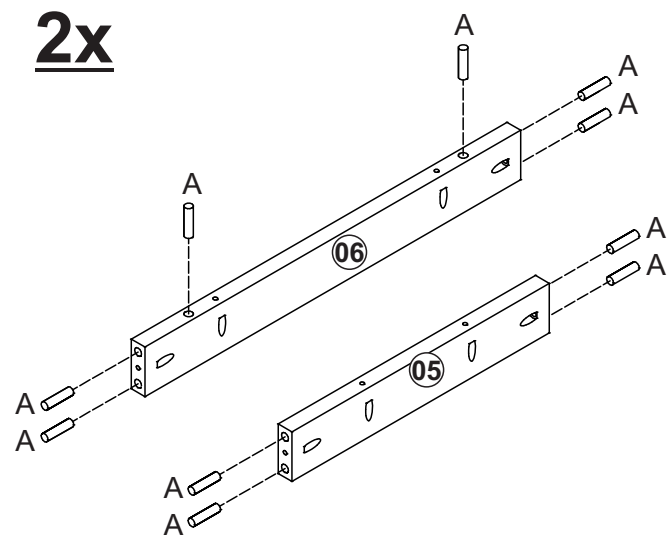


04


2x

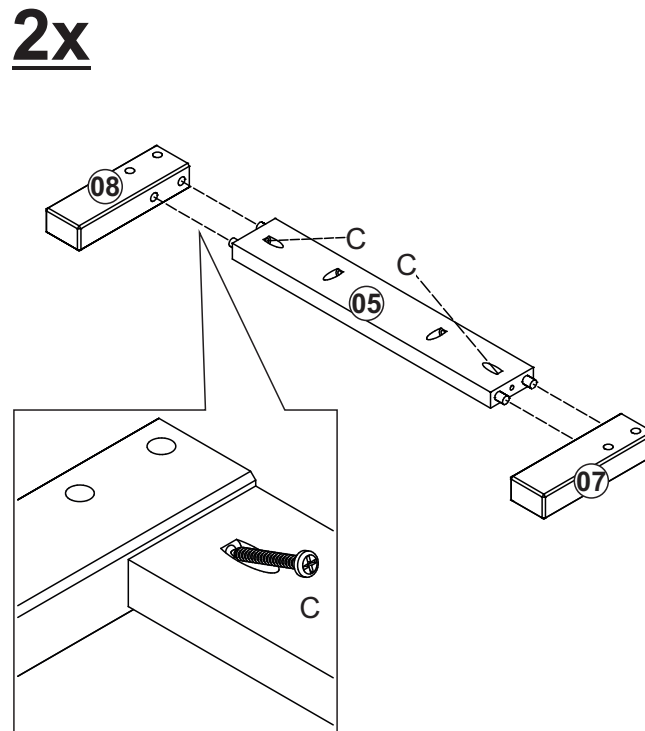


05

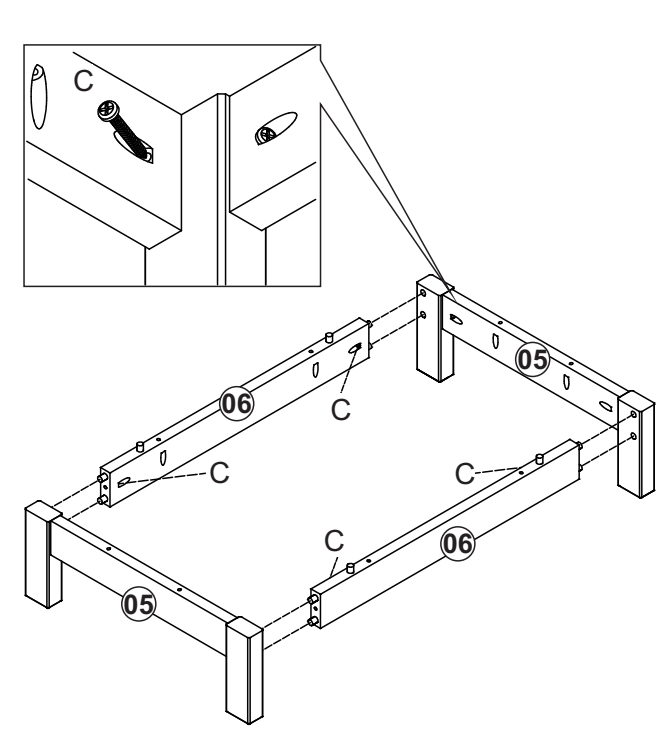


06

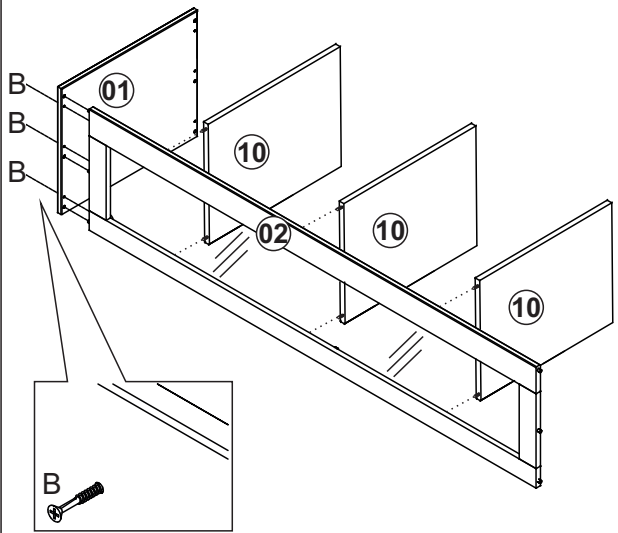


07

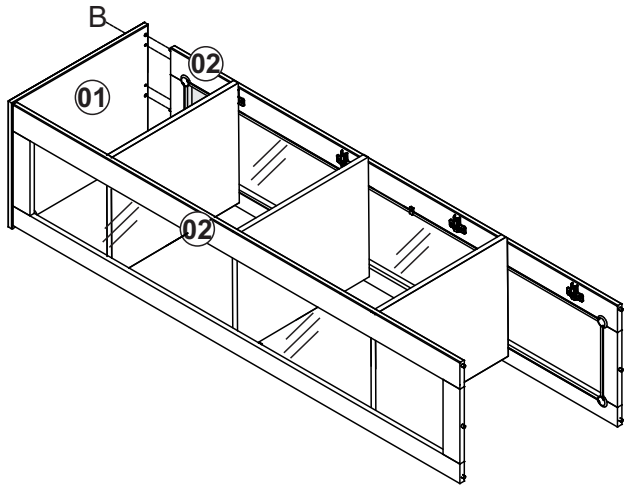


08

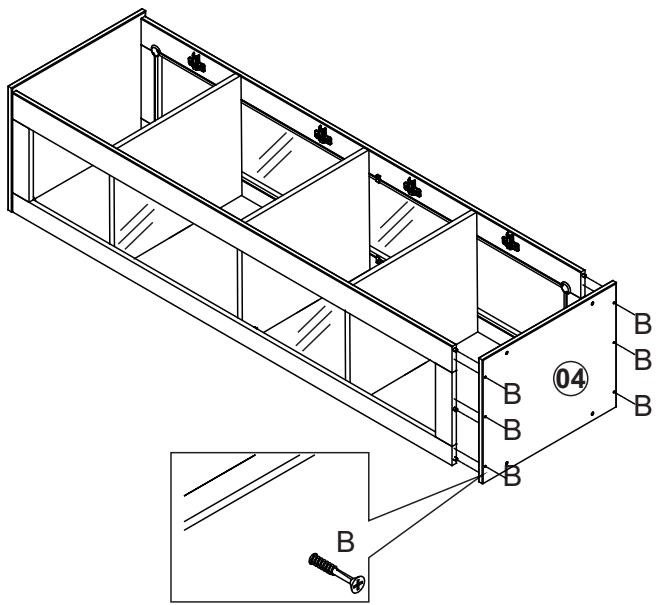

09

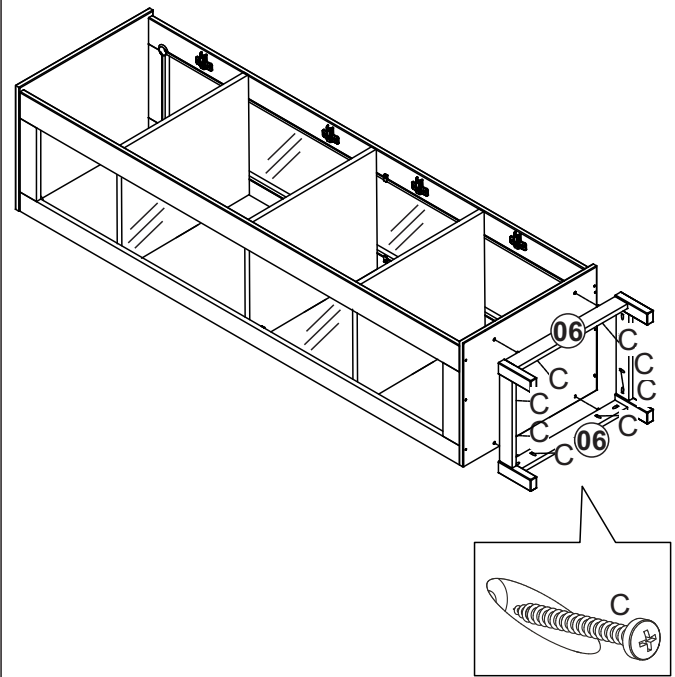

10

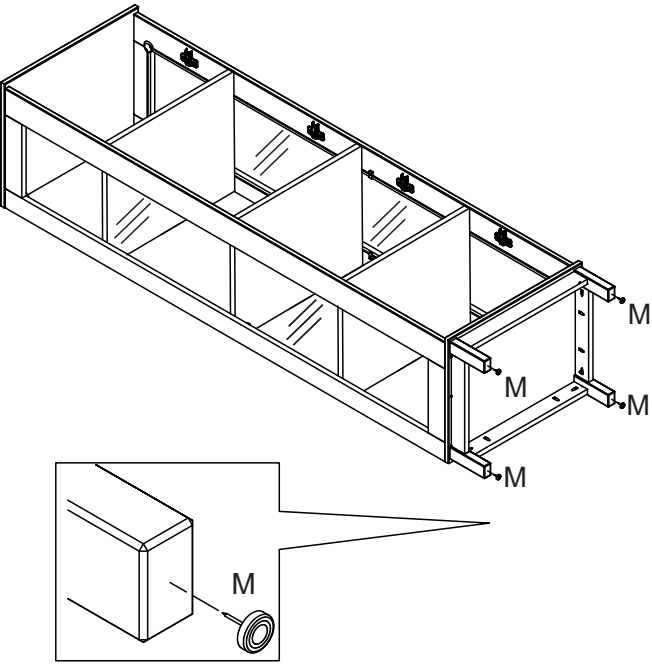

11

